



# the "STEALTH" Classic Scoop

## Assembly Instructions

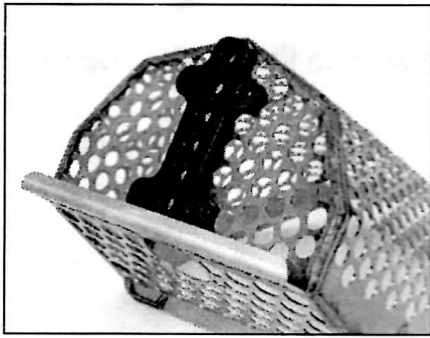


### Step 1

Note: Placement of rear support plate.

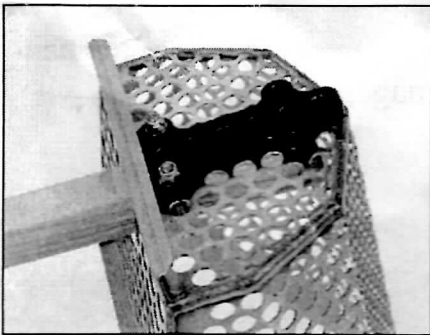


### Step 2

Bolt the handle in place with one upper U-bolt. Use a flat washer under each nut. Lightly tighten.

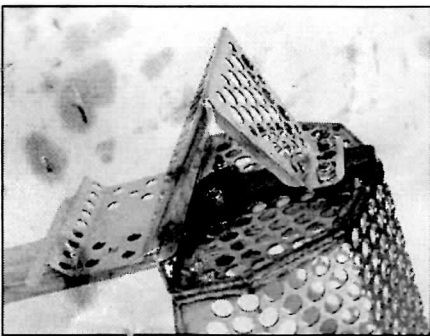


### Step 3

Install the lower U-bolt with the foot pad in place. Snug up the nuts

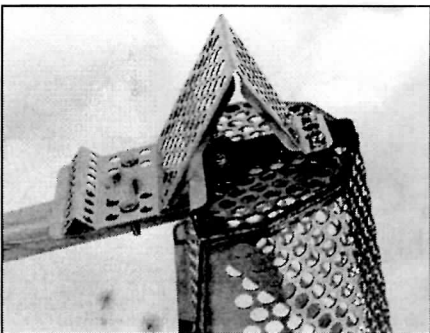

### Step 4


Insert the carriage bolts in the foot pad

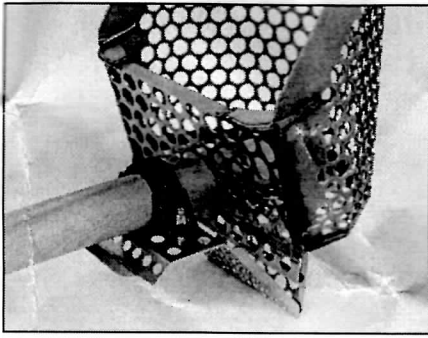


### Step 5

Snap the plastic U clamp to the handle and install the 2 nuts.


**Do not over tighten!** Tighten enough to take up any play. Leave a large gap between the clamp and the foot pad.

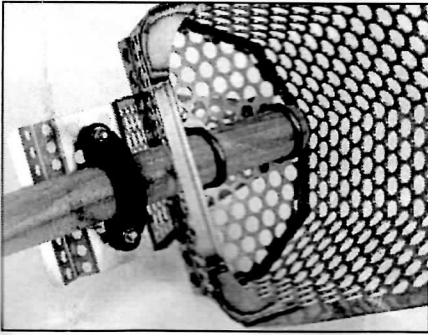

You will have a large gap at the end of the handle as seen in this image.

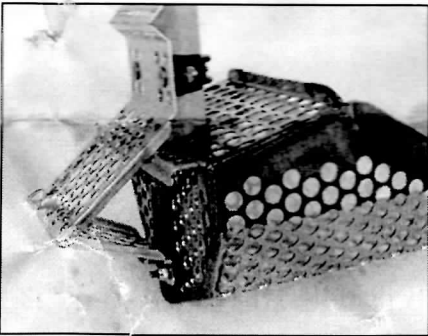

Tighten the nuts on the two U-bolts. Retighten after using a couple times.

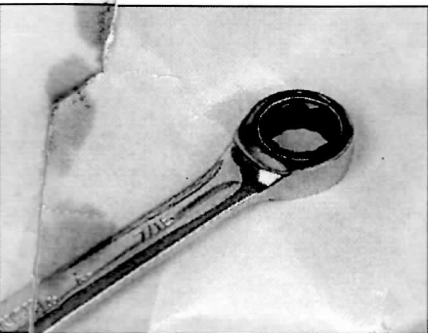

This type of 7/16" ratchet wrench makes assembly fast and easy.

Best of Luck!      Regards, Chuck  
11542 Timken Avenue, Warren, Michigan 48089  
Tel: 586-755-5820

[www.stealthscoop.com](http://www.stealthscoop.com)

youtube search: Stealth Scoop